
3-6. Using the interior lights Interior lights list

Your Lexus is equipped with the illuminated entry system to assist in entering the vehicle. Owing to the function of the system, the lights shown in the following illustration automatically turn on/off according to the presence of the electronic key, whether the doors are locked/unlocked, whether the doors are opened/closed, and the engine switch mode.

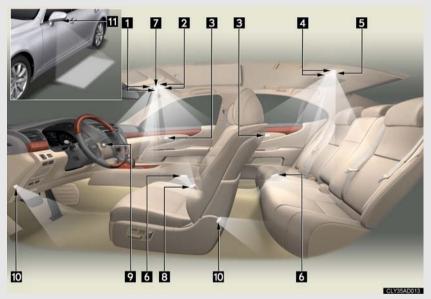

- 11 Front personal lights $(\rightarrow P.408)$
- **2** Front interior lights $(\rightarrow P.408)$
- Inside door handle lighting
- 4 Rear personal lights $(\rightarrow P.408)$
- **5** Rear interior light
- 6 Door courtesy lighting
- Shift lever lighting (when the engine switch is in ACC or IG-ON mode)

- 8 Seat belt buckle lighting
- Engine switch lighting
- Footwell lighting
- 11 Outer foot lights

■ To prevent the battery from being discharged

If the interior lights remain ON when the door is not fully closed and the interior light switch (door position ON/OFF) is ON, the lights will go off automatically after 20 minutes.

■ Customization

Settings (e.g. The time elapsed before lights turn off) can be changed. $(\rightarrow P. 627)$

Interior lights



- 1 OFF
- Door position ON/OFF
- **3** ON

Personal lights

► Front



ON/OFF

► Rear (models without an overhead console)



1 ON/OFF

► Rear (models with an overhead console)



ON/OFF